



# Lindab **Exhaust** air terminal device

Mounting instructions

# Exhaust air terminal device

## SLKNU

### **Assembly**

In order to fulfil the requirements for air-tightness class D, the device must be installed as per 'Assembly Instruction Lindab Safe'.

For dimension Ø 400 and larger, the loose connector must first be secured in the device.

Catalogue values for attenuation are specified for installations in a straight duct, where the sound field have been guided straight. Positioning in a diffuse sound field, e.g. immediately after a fan or bend, means better attenuation.

### **Maintenance**

The device normally doesn't requires any maintenance.